

1. From EasyTouch control panel press .
2. Press - Select "SETTINGS".
3. Press .
4. Press up to "Wireless Address".
5. Press to select.  
"Address Wireless scanning" is displayed.  
Then "Sending Address" will display.
6. Repeat steps 1-5 from wireless handheld. "Address Found" will be displayed.
7. Press on control panel 3 times to return to Main screen.

1. After you plug in a transceiver or power up the unit, wait at least 60 seconds before addressing the unit.
- 2.

