

# EasyTouch Wireless control panel battery cover and gasket Replacement Kit (P/N 520780) Installation Instructions (EasyTouch Wireless control panel)

Remove the battery cover and gasket on the EasyTouch Wireless control panel. The kit includes a battery cover (p/n 520650), gasket (p/n 520649), and six screws (p/n 520738). For more information, refer to the EasyTouch Wireless control panel User's Guide (P/N 520688).

## Remove the batteries

Place the control panel face down on a flat clean surface. Remove the six screws securing the battery cover. Remove the four batteries from the device and set aside.

## STEP 2: Remove gasket

Using a small flat blade screwdriver, the gasket is raised up enough to be removed. Discard the gasket.

