



INSTALLATION GUIDE

IMPORTANT SAFETY INSTRUCTIONS
READ AND FOLLOW ALL INSTRUCTIONS
SAVE THESE INSTRUCTIONS

Technical Support

Hours: 9:00AM to 7:00PM EST (6:00AM - 4:00PM PST)

Call: (800) 831-7133

Visit: www.pentair.com

Fax: (800) 284-4151

Kit Contents

The following items are included in the water/air temperature sensor replacement kit:

Temperature Sensor Assembly - P/N 520872

- Temperature Sensor, 10k Temperature Sensor - P/N 520326
- Temperature Sensor, 10k Ohms, 40 ft - P/N 521583
- Temperature Sensor, 10k Ohms, 20 ft - P/N 521584
- Hose Clamp (1-7/8" - 5" Clamp) - P/N 476168
- Installation Instructions (this manual)

Related manuals

IntelliCenter™ Control System User's Guide (P/N 522990)

IntelliTouch® Control System User's Guide (P/N 521075)

EasyTouch® Control System User's Guide (P/N 521044)

SunTouch® Control System User's Guide (P/N 520785)

Water/Air Temperature Sensor


The sensor can be used as a water or air sensor. The 10k Ohms Temperature Sensor can be used with IntelliCenter, IntelliTouch, EasyTouch, SunTouch and Compool to EasyTouch Upgrade Control Systems.

 
Sensor Installation

IMPORTANT NOTE: If replacing an existing water temperature sensor, be sure to drill out a 3/8" inch hole into the 3-in or 2-in pipe for the new sensor. The old sensor is likely 5/16-inch, and the new sensor will not fit.

1. The existing water sensor will be located between the filter pump and the primary filter. Remove the sensor.
2. Drill a 3/8-inch hole in the 3-inch or 2-inch pipe.
- 3.

IntelliTouch Control System Circuit Board

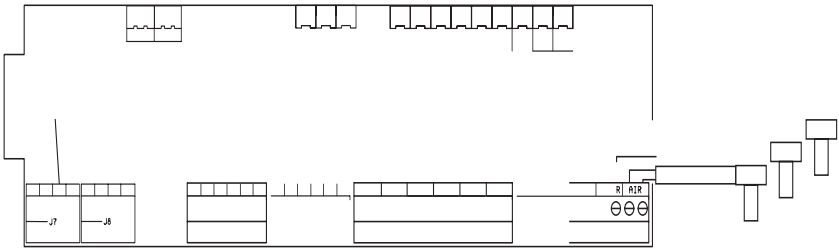





1620 HAWKINS AVE., SANFORD, NC 27330 • (919) 566-8000
10951 WEST LOS ANGELES AVE., MOORPARK, CA 93021 • (805) 553-5000

All indicated Pentair trademarks and logos are property of Pentair. Third party registered and unregistered trademarks and logos are the property of their respective owners.

© 2023 Pentair. All rights reserved. WWW.PENTAIR.COM



P/N 520326 REV. F 7/19/23