

# MasterTemp® and Max-E-Therm®

## POOL HEATERS

### BYPASS ACCESS PLUG KIT (472648Z) INSTRUCTIONS

[ASME MODELS - ONLY]

## IMPORTANT SAFETY INSTRUCTIONS

### SAVE THESE INSTRUCTIONS

#### ▲ WARNING

#### FOR YOUR SAFETY - READ BEFORE OPERATING

Read and understand all instructions before operating this heater. Failure to follow these instructions may result in property damage, personal injury, or death.

For more information, contact Pentair Customer Support at (800) 831-7133.



#### 120/240 VAC NATURAL GAS/LP GAS

ASME MODELS	Natural	Propane
400 B / <sup>R</sup> (MasterTemp)	460775	460776
400 B <sup>T</sup> / <sup>R</sup> (Max-E-Therm)	460763	460764

**Pentair Water Pool and Spa, Inc.**

1620 Hawkins Ave., Sanford, NC 27330 • (800) 831-7133 • (919) 566-8000  
 10951 W. Los Angeles Ave., Moorpark, CA 93021 • (800) 831-7133 • (805) 553-5000

Visit us on the Internet @ [www.pentairpool.com](http://www.pentairpool.com) or [www.staritepool.com](http://www.staritepool.com)

© 2008 Pentair Water Pool and Spa, Inc. All rights reserved.

This document is subject to change without notice.



**STA-RITE®**

## **Location**

The 2-inch Pipe Plug, (for access to Internal Bypass Valve), is located at the top of the Manifold.

## **Function**


The 2-inch Pipe Plug provides access to the Internal Bypass Valve.

## **Servicing Procedure**

To remove the Bypass Access Plug:

### **⚠ WARNING**

---

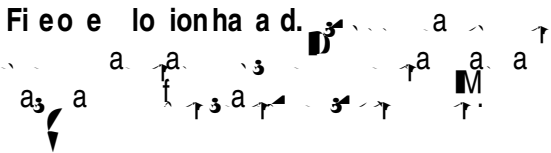

1. Turn off the filter pump and all electrical power to the heater. Close the external Manual Gas Valve.
2. If the heater is below the water level of the pool, close isolation valves to avoid draining the pool.