




JOCKEY PUMP CONTROLLER  
WITHOUT RUNNING PERIOD TIMER

Date **April 2006**

Supersedes Section 936 Page 301  
Dated March 1982

I WHEN TRANSFORMER IS SUPPLIED  
THESE WIRES ARE REMOVED. TRANSFORMER IS  
CONNECTED PER DOTTED WIRING.

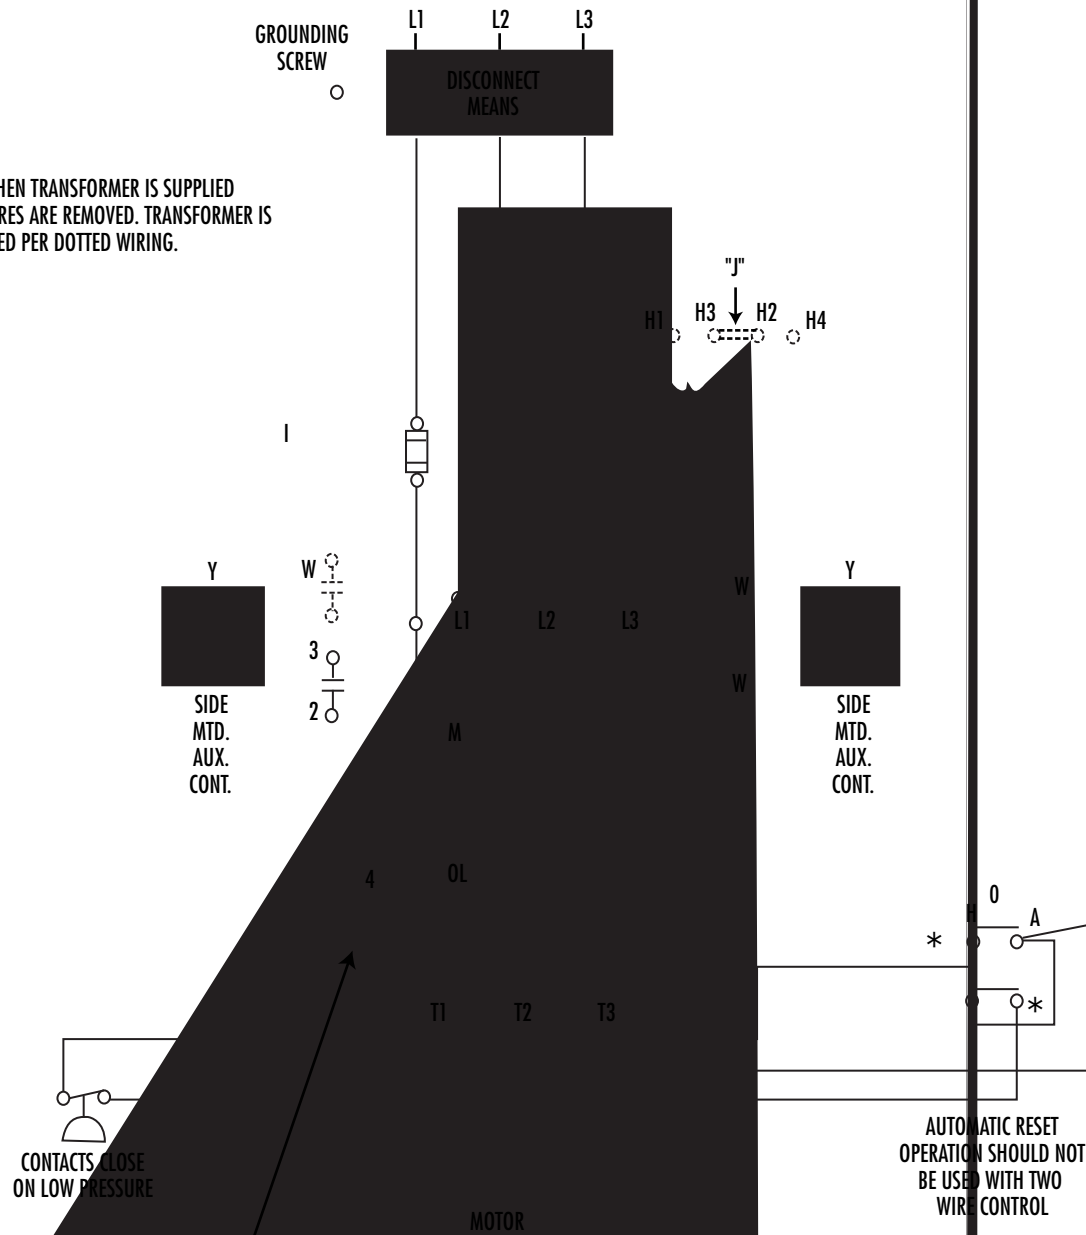

CONTACTS CLOSE  
ON LOW PRESSURE

REMOVE GREEN  
GROUND JUMPER  
IF TRANSFORMER  
IS NOT USED

AUTOMATIC RESET  
OPERATION SHOULD NOT  
BE USED WITH TWO  
WIRE CONTROL

DUAL VOLTAGE TRANSFORMER IS  
SHIPPED AS SHOWN CONNECTED  
FOR HIGHER VOLTAGE. RECONNECT  
JUMPERS "J" PER TABLE FOR  
LOWER VOLTAGE.

VOLTAGE	CONNECT	L1	L2
230	H1 TO H3 H2 TO H4	H1	H4
460	H2 TO H3	H1	H4
FOR SINGLE PRIMARY TRANSFER		H1	H2

# FAIRBANKS NIJHUIS™ FIRE PUMPS

## JOCKEY PUMP CONTROLLER WITH RUNNING PERIOD TIMER

