

INSTALLATION INSTRUCTIONS

⚠ DANGER UNEXPECTED STARTUP HAZARD:

⚠ WARNING EXTREME TEMPERATURE HAZARD:

D

SUBMERSIBLE CARTRIDGE SEAL INSTALLATION

4. Immediately after installing the seal, pressurize the bearing

DRAWINGS

SEAL REMOVAL

1. Remove the retaining ring from the pump shaft groove.
2. To remove the seal, assemble the removal tool as shown in Figure 5. Thread item 2 into the seal. Rotate item 1 to pull the seal assembly out of the pump cavity.

⚠ CAUTION USED SEAL PARTS MAY CONTAIN SHARP BURRS OR EDGES.

Disposal of used seals and packaging material should be performed in accordance with applicable local rules and regulations.



All indicated Pentair trademarks and logos are property of Pentair. Third party registered and unregistered trademarks and logos are the property of their respective owners. Because we are

® P-80 is a registered trademark of International Products Corporation

©2022 Pentair. All Rights Reserved.

HYD12725 (09-15-2022)