




SUBMERSIBLE SEWAGE PUMP MW50 SERIES

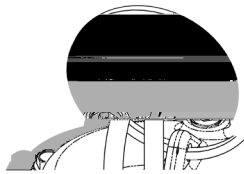

INSTALLATION AND OPERATION MANUAL

pentair.com


TABLE OF CONTENTS

INTRODUCTION

| | |
|--------------------------|---|
| Safety Instructions..... | 3 |
| Installation..... | 4 |
| Repair Parts Index | 5 |
| Troubleshooting | 6 |
| Dimensions..... | 7 |
| Warranty..... | 8 |

SAFETY INSTRUCTIONS

SAFETY SYMBOLS

 This is the safety alert symbol. When you see this symbol on your pump or in this manual, look for one of the following signal words and be alert to the potential for personal injury:



—

—

————

REPAIR PARTS INDEX

| REF. | DESCRIPTION | QTY. | PART NUMBER |
|------|---------------|------|-------------------------|
| 1 | Electric Cord | 1 | 115V cord PW117-122-TSE |
| 1 | | | |
| | | | |
| | | | |
| | | | |

TROUBLESHOOTING

| PROBLEM | POSSIBLE CAUSES |
|---------|-----------------|
|---------|-----------------|

1.

Pump does not run or start when
water is up in tank.

DIMENSIONS



WARRANTY

Limited Warranty