## PENTEK® VFD-ALT ALTERNATING CONTROL PANEL

The Alternating PENTEK INTELLIDRIVE Control Panel will q 1 0 0 1 318.42 444.6082 cm /CS1 CS /P0 SCN



## PENTEK° VFD-ALT ALTERNATING CONTROL PANEL

## **MODEL NUMBERS**

			Dimensions (In.)				
Model	Rated Volts	HZ	Height	Width	Depth	Weight lbs.	
VFD-ALT	120 VAC	50/60	5.375	3.25	1.625	1.0	

## System Overview

After the panel is mounted, wire the panel, plug it into a 120 VAC outlet, and turn the switch to Alternate. "Pump 1" will turn on and the "pump 1 enable" LED will illuminate. After 24 hours "Pump 2" will turn on and the "pump 2 enable" LED will illuminate.







293 WRIGHT STREET, DELAVAN, WI 53115 WWW.PUMPS.COM PH: 866-9 PENTEK ORDERS FAX: 800-426-9446

Because we are continuously improving our products and services, Pentair reserves the right to change specifications without prior notice.

© 2012 Pentair Ltd. All Rights Reserved. P10300WS (12/3/12)