TABLE OF CONTENTS

Safety Information 3

Installation and Operation 4

Wiring Diagrams 6

GENERAL INFORMATION

PUMP MODELS

These instructions cover the installation and service of the Myers pumps as listed on the front cover. The hazardous location models are Factory Mutual approved and listed hazardous location for hazardous sewage locations Class 1, Division 1, Groups C,D.

MOTOR HP & VOLTAGES

These pumps are offered in a three phase wiring configuration only. Voltages will vary according to the application.

ELECTRICAL CONTROLS

All of these pump models must be used with a control panel. These control panels must be obtained from Myers or must be approved by Myers or warranty on pump is void.

GENERAL CONSTRUCTION

The motor construction is designed to meet Factory Mutual's requirements for Class 1, Division 1, Groups C,D sewage

The presence of water energizes a red seal leak warning light at the control panel. This is a warning light only, and does not stop the motor. It indicates a leak has occurred and the pump must be repaired. Normally, this indicates the outboard seal has leaked. Allowing the unit to operate after the warning could cause upper seal leakage along with motor failure.

The resistance across the moisture sensing (seal failure) probes should be checked after a seal leak warning light has lit. This can be done by disconnecting the red and orange control wires from the control panel, and measuring the resistance with an ohmmeter between the wires. If the measured values are below specification, the pump may have a lower seal failure and require service.

On the Myers hazardous location control panels the seal leak test switch tests the seal leak circuit continuity. When pushed, the seal leak test bulb should light. If the test bulb does not light it means either the wiring circuitry to the seal leak probes has been broken or the bulb has burned out.

Note: Myers control panels supply the correct circuitry for moisture and heat sensor connections. Failure to install the correct circuitry with proper connection would negate warranty and FM approval.

MOTOR POWER CORD, CONTROL CORD AND CORD CAP ASSEMBLY

Each motor power cord has 4 conductors: white, black, red and green. For a three phase motor the red, black and white conductors connect to the three23.996.6 (e)-14.b3 /Lang (enm9/Langd23.996.6s23.996.6,19.5 (n)-18 (d w)-25 2)3-18.5 (c)-20.4 (u)-9.6 (i)-18.5 (t)y.4 (a)-

DISASSEMBLY

With the pump located in a secure place, remove the bolts fastening the seal housing to the volute. The motor and impeller can now be removed as a unit.

Lay the unit down on its side. If the lower seal is to be removed, it is recommended that the oil in the seal chamber be drained. This can be done by removing the lower seal chamber plug and draining the oil into a holding container.

To remove the impeller: Using a proper wrench, the impeller retaining bolt and washer must be removed. This may require a piece of wood placed between the vanes to keep the impeller from rotating while removing the bolt. Once the bolt has been removed, tap lightly with a hammer around the outside diameter of the impeller to loosen from shaft and key. After removing impeller, the seal retainer needs to be removed to expose seal.

WIRING DIAGRAM

REPAIR PARTS INDEX

REPAIR PARTS INDEX

4R/4RX

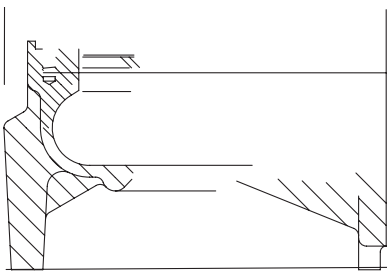

REPAIR PARTS INDEX

WET END PARTS FOR USE WITH PRODUCT BUILT WITH REGAL MOTOR.

3V/3VX

REF.	DESCRIPTION	PART NUMBER	QTY.

3RH/3RHX

REF.	DESCRIPTION	PART NUMBER	QTY.

4V/4VX

REF.	DESCRIPTION	PART NUMBER	QTY.

4R/4RX

REF.	DESCRIPTION	PART NUMBER24R/4RX	

REPAIR PARTS INDEX

PUMP	RPM	HP	TRIM	IMPELLER

CHECK LIST IF PUMP DOES NOT OPERATE PROPERLY

PENTAIR